



### Model Number

**PACTware IO-Link Connection Wizard**  
Add-In for PACTware

### Features

- For all sensors with IO-Link interface
- Automatic detection of the connected USB-IO-Link master and IO-Link sensor
- Independent PACTware project setup and connection to the IO-Link sensor with just one double-click

### Function

The Pepperl+Fuchs Connection Wizard is a supplement to the PACTware configuration tool. Double-click the wizard icon to automatically start the latest PACTware version installed on the PC. The IO-Link USB master connected to the PC and the sensor to be parameterized are then automatically detected by the wizard. The corresponding driver components such as DTM or IODD are loaded into the PACTware project. Finally, the wizard establishes communication to the connected sensor. This provides quick, direct access to sensor parameters.

ase date: 2018-11-23 15:39 Date of issue: 2018-12-05 t187859\_eng.xml

### Technical data

#### Software

Software requirements	PACTware Version 4.1 or higher or PACTware Version 5.0.2.33 or higher
Operating system	Microsoft Windows 7 (32 and 64 Bit) Microsoft Windows 8 (32 and 64 Bit) Microsoft Windows 10 (32 und 64 Bit)
Operating conditions	Supports Pepperl+Fuchs IO-Link master02 USB (item number 304074) Supports all sensors with IO-Link interface via their IODD and most Pepperl+Fuchs sensors with IO-Link interface additionally via their DTM.

#### Note

- As IO-Link master, the Pepperl+Fuchs "IO-Link master02 USB" (item number 304074) is required.
- The Pepperl+Fuchs PACTware IO-Link Connection Wizard always starts the latest PACTware version installed on the PC.
- If the Pepperl+Fuchs PACTware IO-Link Connection Wizard on the PC finds a DTM compatible with the connected Pepperl+Fuchs sensor, this is loaded. Otherwise, the appropriate IODD for the sensor is loaded into the PACTware project. The last option works for all IO-Link sensors available on the market.

### Commissioning an IO-Link Sensor with the PACTware IO-Link Connection Wizard

The following software components must be installed on the PC:

- PACTware
- Pepperl+Fuchs PACTware IO-Link Connection Wizard
- DTM or IODD of the connected IO-Link master02 USB
- DTM or IODD of the connected sensor

1. Connect the IO-Link master02 USB to the PC with the USB cable. Make sure that the IO-Link master02 USB is supplied with power via its external power supply.
2. Connect the required sensor to the IO-Link master02 USB.
3. Double-click on the Pepperl+Fuchs PACTware IO-Link Connection Wizard icon.