



Ultrasonic sensor


UC2000-30GM70-UE2R2-K-V15

- Analog output 0 ... 10 V
- 1 switch output
- Synchronization options
- Temperature compensation
- Can be parameterized via the ULTRA-PROG-IR software and interface (accessories)

Ultrasonic diffuse sensor with separate transducer



Dimensions

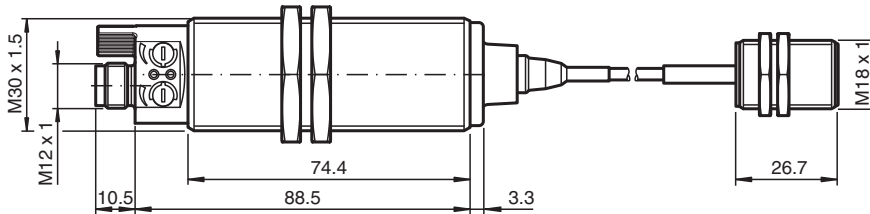

Technical Data

General specifications

| | |
|-----------------------|-----------------|
| Sensing range | 100 ... 2000 mm |
| Adjustment range | 150 ... 2000 mm |
| Dead band | 0 ... 100 mm |
| Standard target plate | 100 mm x 100 mm |
| Transducer frequency | approx. 200 kHz |
| Response delay | ≤ 100 ms |

Nominal ratings

| | |
|--------------------------------|-------------------------------|
| Temperature drift | ≤ ± 1.5 % of full-scale value |
| Time delay before availability | t_v ≤ 125 ms |


Technical Data

| | | |
|---|-------|---|
| Limit data | | |
| Permissible cable length | | max. 300 m |
| Indicators/operating means | | |
| LED yellow | | switching state switch output |
| LED green/yellow | | yellow: object in evaluation range green: Teach-In |
| Potentiometer | | switching output adjustable |
| Electrical specifications | | |
| Rated operating voltage | U_e | 24 V DC |
| Operating voltage | U_B | 20 ... 30 V DC (including ripple) |
| Ripple | | ≤ 10 % |
| No-load supply current | I_0 | ≤ 50 mA |
| Interface | | |
| Interface type | | Infrared |
| Mode | | point-to-point connection |
| Input/Output | | |
| Input/output type | | 1 synchronization connection, bidirectional (Factory setting: synchronized mode) / Teach-In input |
| 0 Level | | ≤ 3 V |
| 1 Level | | ≥ 15 V |
| Input impedance | | typ. 900 Ω |
| Number of sensors | | max. 10 |
| Switching output | | |
| Output type | | 1 switch output PNP, NO (NC contact programmable) |
| Default setting | | 150 ... 2000 mm (adjustable via potentiometer) |
| Repeat accuracy | R | ± 3 mm |
| Operating current | I_L | 300 mA , short-circuit/overload protected |
| Switching frequency | | ≤ 4 Hz |
| Switching hysteresis | | 20 mm (programmable) |
| Voltage drop | | ≤ 3 V |
| Off-state current | | ≤ 10 μA |
| Analog output | | |
| Output type | | 1 voltage output 0 ... 10 V , ascending/descending programmable |
| Default setting | | rising ramp ; evaluation limit A1: 150 mm ; evaluation limit A2: 2000 mm |
| Load resistor | | ≥ 2 kΩ |
| Compliance with standards and directives | | |
| Standard conformity | | |
| Standards | | EN IEC 60947-5-2:2020 IEC 60947-5-2:2019 EN 60947-5-7:2003 IEC 60947-5-7:2003 |
| Approvals and certificates | | |
| UL approval | | cULus Listed, Class 2 Power Source |
| CCC approval | | CCC approval / marking not required for products rated ≤36 V |
| Ambient conditions | | |
| Ambient temperature | | -25 ... 70 °C (-13 ... 158 °F) |
| Storage temperature | | -40 ... 85 °C (-40 ... 185 °F) |
| Shock resistance | | 30 g , 11 ms period |
| Vibration resistance | | 10 ... 55 Hz , Amplitude ± 1 mm |
| Mechanical specifications | | |
| Connection type | | Connector plug M12 x 1 , 5-pin |
| Degree of protection | | IP65 |
| Material | | |
| Housing | | brass, nickel-plated |
| Cable | | PVC |


Technical Data

| | |
|-----------------------|--|
| Transducer | epoxy resin/hollow glass sphere mixture; polyurethane foam |
| Installation position | any position |
| Mass | 190 g |
| Dimensions | |
| Length | 111.3 mm |
| Diameter | 30 mm |
| Construction type | Cylindrical |
| Cable length | 165 cm |

Connection

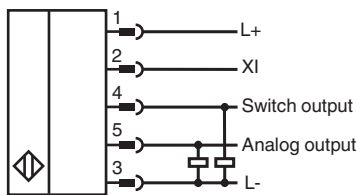

Connection Assignment

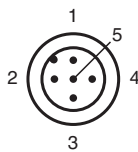

Wire colors in accordance with EN 60947-5-2

- 1 | BN (brown)
- 2 | WH (white)
- 3 | BU (blue)
- 4 | BK (black)
- 5 | GY (gray)

Characteristic Curve

Characteristic response curve




Curve 1: flat surface 100 mm x 100 mm
 Curve 2: round bar, Ø 25 mm

Release date: 2025-06-12 Date of issue: 2025-06-14 Filename: 238407_eng.pdf

Characteristic Curve


Analog output operating mode

Rising ramp



Switching output operating mode

Window operation mode

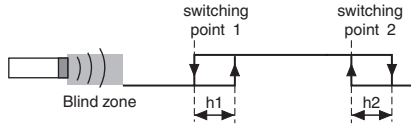

Indication

Displays and Controls

The sensor has two potentiometers and two display LEDs.

| | | |
|-----------------|--|--|
| LED 1 (yellow) | On/off: Switching state of switching output Flashing: Error when setting the switching points (switching point 2 < switching point 1). This state only occurs in window function operating mode (2 switching points). | |
| LED 2 (yellow) | On/off: Object between evaluation limit A1 and evaluation limit A2 in the analog evaluation range. | |
| LED 2 (green) | approx. 500 ms on: Range limit taught in Off: Normal mode | |
| Potentiometer 1 | Setting for switching point 1 of the switching output. | |
| Potentiometer 2 | Setting for switching point 2 of the switching output | |

The potentiometer function described illustrates the default function. The function of the potentiometer can be altered using the ULTRA-PROG-IR software. As soon as a configuration has been changed, the potentiometer function selected using ULTRA-PROG-IR is activated.

Function

Setting the Sensor Using the Potentiometers

The sensor is equipped with two potentiometers. These potentiometers are assigned to the switching output by default. The switching output operates in window mode by default (2 switching points). Potentiometer 1 is used to set the near switching point of the switching window. Potentiometer 2 is used to set the distant switching point of the switching window.


Note:

The function of the potentiometer can be altered using the ULTRA-PROG-IR software. As soon as a configuration has been changed, the potentiometer function selected using ULTRA-PROG-IR is activated.

Parameterization

Parameterization via ULTRA-PROG-IR

In order to be able to set the sensor parameters and adjust the sensor to the respective application, the sensor is able to communicate with a PC via the integrated infrared interface. The UC-18/30GM-IR interface cable is required to allow communication via this method. This cable is connected to an unused USB port on the PC.

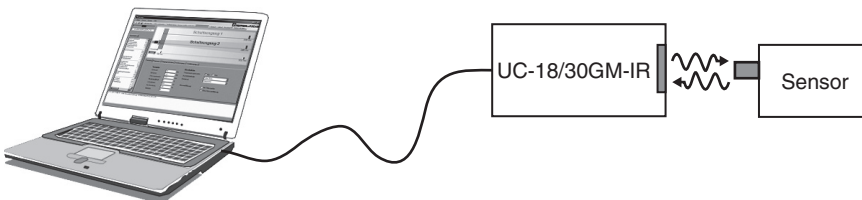

The ULTRA-PROG-IR parameterization software is also required for setting the sensor parameters. The ULTRA-PROG-IR software can be downloaded for free from the www.pepperl-fuchs.com website. The software allows all open parameters to be set, including:

- All trip points and switching hystereses
- Output modes and behaviors
- Delay times
- Settings and setting ranges of the potentiometer
- Settings for teach-in and synchronization
- Definition of blind zones
- Sensor modes and measurement methods
- Filtering measurement values

The following service functions are also available:

- Observing and recording measurement values
- Diagnosing interference reflections

Teach-in

The sensor is equipped with a function input (XI). In order to teach in a limit value, this sensor must be parameterized as the Teach-in input using the ULTRA-PROG-IR parameterization software. This parameterization software allows you to specify what limit value is taught in.

Note:

The Teach-in function is not activated when the sensor is delivered.

Description of the Teach-in process:

Release date: 2025-06-12 Date of issue: 2025-06-14 Filename: 238407_eng.pdf

1. Position an object at the required distance.
2. Connect the Teach-in input to L-.
The green LED lights up briefly after approx. 3 seconds. This indicates that the required distance has been successfully saved.
3. Disconnect the Teach-in input from L-.

Note:

If the Teach-in input remains connected to L-, the Teach-in process is repeated every 3 seconds.

Commissioning

Synchronization

The sensor features a function input (XI). Using the ULTRA-PROG-IR parameterization software, this function input can be configured as a synchronization input to suppress mutual interference from external ultrasonic signals. This is illustrated in the following description. If the synchronization input is not connected, the sensor operates with internally generated cycle pulses.

External synchronization

The sensor can be synchronized by applying external rectangular pulses. The pulse duration must be $\geq 100 \mu s$. Each rising pulse edge sends an individual ultrasonic pulse. If the signal at the synchronization input is high, the sensor reverts to the normal, unsynchronized operating mode. If a low signal is applied to the synchronization input, the sensor switches to standby. In this operating mode, the last recorded output statuses are retained.

Internal synchronization

Common mode operation

Up to ten sensors can be synchronized with each other. To do this, the synchronization inputs of the individual sensors are connected to each other. When configured in this state, all of the sensors send the ultrasonic signals together at the same time. The cycle rate corresponds to the cycle rate of the sensor with the lowest rate.

Multiplex mode

Up to ten sensors can work in multiplex mode; i.e. the sensors send their ultrasonic signals in succession. This prevents the sensor signals interfering with each other. In multiplex mode, the synchronization inputs of all sensors are connected to each other. An address must also be assigned to each sensor using the ULTRA-PROG-IR parameterization software, and the number of sensors to be synchronized must be determined. To start multiplex mode, all sensors are commissioned together by switching on the power supply.

Operation

Low Temperature Operation

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensor head (4) fixation the included silicon rings (2) have to be used. Therefore a fixation hole $\text{Ø}20^{+0.5}$ mm is required. The silicon rings (2) have to be placed between the fixation nuts (1) and the mounting base (3). Take care that the silicon ring's centering ring lays into the fixation hole.

