

# HART Termination Board

## HiSHPTB/32/YOK-AI-R-02




- Yokogawa Centum 3000 CS AAI135 replacement FTA
- 32 channels of I/O
- 2- or 3-wire or self powered transmitters
- Short-circuit protected
- Plug-n-play wiring capabilities



### Function

The Termination Board designed for easy HiDMux2700 Multiplexer integration with the Yokogawa Centum 3000 CS system. With the Multiplexer integrated into the board and plug-n-play option for the DCS equipment, this provides a very clean access to the HART signals, while reducing the need for marshalling cabinets and reducing equipment that require extra cabinet space. The HART Termination Board provides a robust solution for on-line HART communications, interfaces up to 32 field located HART devices, and, it allows the user to replace standard DCS field termination panels.

### Connection

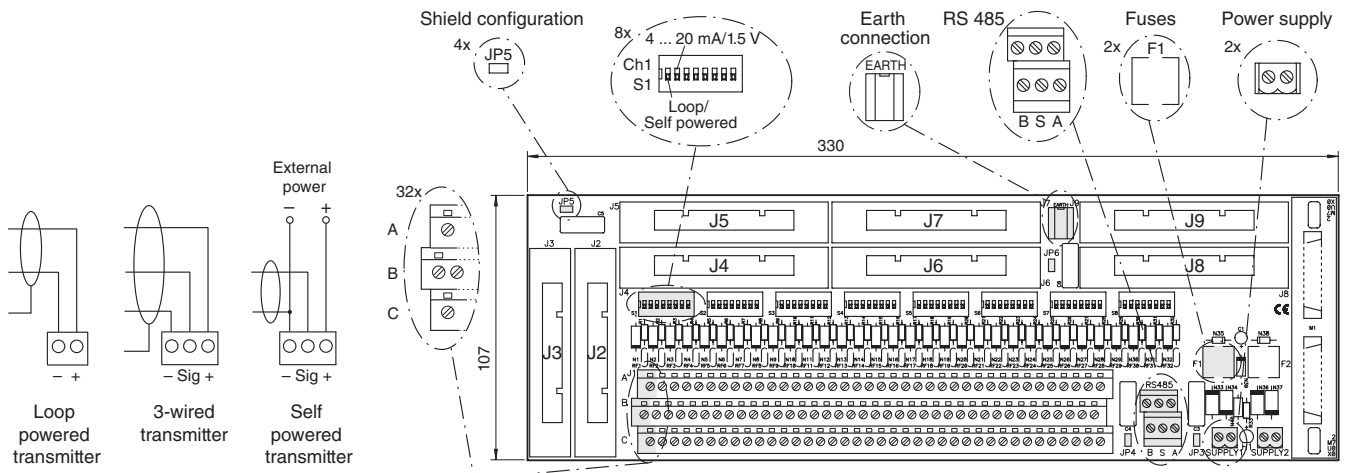

### Technical Data

#### Supply

Rated voltage	$U_r$	20 ... 30 V DC
Fusing		3.15 A , 5 x 20 mm (0.2 x 0.8 inch)
Power dissipation		0.7 W , with Multiplexer
Reverse polarity protection		no

#### HART signal channels (intrinsically safe)

HART signal channels		
Number of channels		32 unbalanced signal loops

#### Redundancy

Supply		no
--------	--	----

#### Galvanic isolation

Release date: 2023-05-31 Date of issue: 2023-05-31 Filename: 907236\_eng.pdf

## Technical Data

HART signal channels	30 V DC
<b>Ambient conditions</b>	
Ambient temperature	0 ... 55 °C (32 ... 131 °F)
Relative humidity	5 ... 90 %, non-condensing
<b>Mechanical specifications</b>	
Core cross section	2.5 mm <sup>2</sup> (16 AWG)
Connection	field side: screw terminals control side: KS connector (proprietary) RS 485 interface: removable screw terminals power: removable screw terminals
Mass	approx. 500 g
Dimensions	330 x 107 x 208 mm (12.9 x 4.2 x 8.2 inch) (W x H x D) , depth including module assembly with HiDMux2700
Mounting	DIN rail mounting
<b>General information</b>	
Supplementary information	Observe the certificates, declarations of conformity, instruction manuals, and manuals where applicable. For information see <a href="http://www.pepperl-fuchs.com">www.pepperl-fuchs.com</a> .

## Additional Information

### Connection Assignment

Connector	Channels
J1	1 ... 32
J2	1 ... 8, primary
J3	1 ... 8, secondary
J4	9 ... 16, primary
J5	9 ... 16, secondary
J6	17 ... 24, primary
J7	17 ... 24, secondary
J8	25 ... 32, primary
J9	25 ... 32, secondary

### Configuration

Switch	Channel	Switch	Field and DCS have the same signal (4 ... 20 mA or 1 ... 5 V)	Convert a 4 ... 20 mA signal from the field into the 1 ... 5 V signal for DCS	Switch	Self powered device	Loop powered device
S1	1	1	Off	On	2	Off	On
	2	3	Off	On	4	Off	On
	3	5	Off	On	6	Off	On
	4	7	Off	On	8	Off	On
S2	5	1	Off	On	2	Off	On
	6	3	Off	On	4	Off	On
	7	5	Off	On	6	Off	On
	8	7	Off	On	8	Off	On
S3	9	1	Off	On	2	Off	On
	10	3	Off	On	4	Off	On
	11	5	Off	On	6	Off	On
	12	7	Off	On	8	Off	On
S4	13	1	Off	On	2	Off	On
	14	3	Off	On	4	Off	On
	15	5	Off	On	6	Off	On
	16	7	Off	On	8	Off	On
S5	17	1	Off	On	2	Off	On
	18	3	Off	On	4	Off	On
	19	5	Off	On	6	Off	On
	20	7	Off	On	8	Off	On
S6	21	1	Off	On	2	Off	On
	22	3	Off	On	4	Off	On
	23	5	Off	On	6	Off	On
	24	7	Off	On	8	Off	On

## Additional Information

Switch	Channel	Switch	Field and DCS have the same signal (4 ... 20 mA or 1 ... 5 V)	Convert a 4 ... 20 mA signal from the field into the 1 ... 5 V signal for DCS	Switch	Self powered device	Loop powered device
S7	25	1	Off	On	2	Off	On
	26	3	Off	On	4	Off	On
	27	5	Off	On	6	Off	On
	28	7	Off	On	8	Off	On
S8	29	1	Off	On	2	Off	On
	30	3	Off	On	4	Off	On
	31	5	Off	On	6	Off	On
	32	7	Off	On	8	Off	On

Jumper	Analog input	Galvanic grounding	Capacitive grounding
JP3	RS-485	closed	opened
JP4	Field side channels 1 ... 32	closed	opened
JP5	DCS side channels 1 ... 16	closed	opened
JP6	DCS side channels 17 ... 32	closed	opened

### Yokogawa I/O Interface

- AA135